

Serato™ Scratch Live ver.2.1 EFX Mapping

Effect Operation (MIDI Ch2 / Super Knob Mode for Effect Unit1)

- DN-HC1000S Control buttons & knobs



- MIDI Ch2 (SHIFT + BROWSE)

DN-HC1000S CONTROLS	SCRATCH LIVE FUNCTIONALITY	SHIFT +
A SAMP [A]	1 Open Effect window	
B BEND DOWN [A]	2 Ultra Knob Mode Button [Unit 1]	-
C BEND UP [A]	3 Super Knob Mode Button [Unit 1]	-
D PREVIOUS [A]	4 Effect Unit 1 BPM Decrease	-
E NEXT TRACK [A]	5 Effect Unit 1 BPM Increase	-
F CUE1 [A]	6 Effect Unit 1 Attach To Deck 1	-
G CUE2 [A]	7 Effect Unit 1 Attach To Deck 2	-
H CUE1 [B]	8 Effect Unit 2 Attach To Deck 1	-
I CUE2 [B]	9 Effect Unit 2 Attach To Deck 2	-
J BEND DOWN [B]	10 Effect Unit 2 BPM Decrease	-
K BEND UP [B]	11 Effect Unit 2 BPM Increase	-
L PREVIOUS [B]	12 Ultra Knob Mode Button [Unit 2]	-
M NEXT TRACK [B]	13 Super Knob Mode Button [Unit 2]	-
N LOOP CUT SW [A]	14 Effect Button 1 [On/Off] [Unit 1]	-
LOOP CUT KNOB [A]	15 Effect Master Knob 1 [Unit 1]	16 Effect Select 1 [Unit 1]
O FILE SELECT SW	17 Effect Button 2 [On/Off] [Unit 1]	-
FILE SELECT KNOB	18 Effect Master Knob 2 [Unit 1]	19 Effect Select 2 [Unit 1]
P LOOP CUT SW [B]	20 Effect Button 3 [On/Off] [Unit 1]	-
LOOP CUT KNOB [B]	21 Effect Master Knob 3 [Unit 1]	22 Effect Select 3 [Unit 1]
Q SHIFT	- Shift Button	-

Serato™ is trademark of Serato Audio Research.
Serato™ Scratch Live is a registered trademark of Serato Audio Research.

- Scratch Live



Effect Operation (MIDI Ch3 / Super Knob Mode for Effect Unit2)

- DN-HC1000S Control buttons & knobs



- MIDI Ch3 (SHIFT + HISTORY)

DN-HC1000S CONTROLS	SCRATCH LIVE FUNCTIONALITY	SHIFT +
A SAMP [A]	1 Open Effect window	
B BEND DOWN [A]	2 Ultra Knob Mode Button [Unit 1]	-
C BEND UP [A]	3 Super Knob Mode Button [Unit 1]	-
D PREVIOUS [A]	4 Effect Unit 1 BPM Decrease	-
E NEXT TRACK [A]	5 Effect Unit 1 BPM Increase	-
F CUE1 [A]	6 Effect Unit 1 Attach To Deck 1	-
G CUE2 [A]	7 Effect Unit 1 Attach To Deck 2	-
H CUE1 [B]	8 Effect Unit 2 Attach To Deck 1	-
I CUE2 [B]	9 Effect Unit 2 Attach To Deck 2	-
J BEND DOWN [B]	10 Effect Unit 2 BPM Decrease	-
K BEND UP [B]	11 Effect Unit 2 BPM Increase	-
L PREVIOUS [B]	12 Ultra Knob Mode Button [Unit 2]	-
M NEXT TRACK [B]	13 Super Knob Mode Button [Unit 2]	-
N LOOP CUT SW [A]	23 Effect Button 1 [On/Off] [Unit 2]	-
LOOP CUT KNOB [A]	24 Effect Master Knob 1 [Unit 2]	25 Effect Select 1 [Unit 2]
O FILE SELECT SW	26 Effect Button 2 [On/Off] [Unit 2]	-
FILE SELECT KNOB	27 Effect Master Knob 2 [Unit 2]	28 Effect Select 2 [Unit 2]
P LOOP CUT SW [B]	29 Effect Button 3 [On/Off] [Unit 2]	-
LOOP CUT KNOB [B]	30 Effect Master Knob 3 [Unit 2]	31 Effect Select 3 [Unit 2]
Q SHIFT	- Shift Button	-

- Scratch Live



Effect Operation (MIDI Ch4 / Ultra Knob Mode for Effect Unit1&2)

- DN-HC1000S Control buttons & knobs



- MIDI Ch4 (SHIFT + PREPARE)

DN-HC1000S CONTROLS	SCRATCH LIVE FUNCTIONALITY	SHIFT +
A SAMP [A]	1 Open Effect window	
B BEND DOWN [A]	2 Ultra Knob Mode Button [Unit 1]	-
C BEND UP [A]	3 Super Knob Mode Button [Unit 1]	-
D PREVIOUS [A]	4 Effect Unit 1 BPM Decrease	-
E NEXT TRACK [A]	5 Effect Unit 1 BPM Increase	-
F CUE1 [A]	6 Effect Unit 1 Attach To Deck 1	-
G CUE2 [A]	7 Effect Unit 1 Attach To Deck 2	-
H CUE1 [B]	8 Effect Unit 2 Attach To Deck 1	-
I CUE2 [B]	9 Effect Unit 2 Attach To Deck 2	-
J BEND DOWN [B]	10 Effect Unit 2 BPM Decrease	-
K BEND UP [B]	11 Effect Unit 2 BPM Increase	-
L PREVIOUS [B]	12 Ultra Knob Mode Button [Unit 2]	-
M NEXT TRACK [B]	13 Super Knob Mode Button [Unit 2]	-
N LOOP CUT SW [A]	32 Effect Ultra Button [On/Off] [Unit 1]	-
LOOP CUT KNOB [A]	33 Effect Ultra Knob [Unit 1]	34 Effect Ultra Select [Unit 1]
P LOOP CUT SW [B]	35 Effect Ultra Button [On/Off] [Unit 2]	-
LOOP CUT KNOB [B]	36 Effect Ultra Knob [Unit 2]	37 Effect Ultra Select [Unit 2]
Q SHIFT	- Shift Button	-

- Scratch Live

